


## Attendant Console Pickup

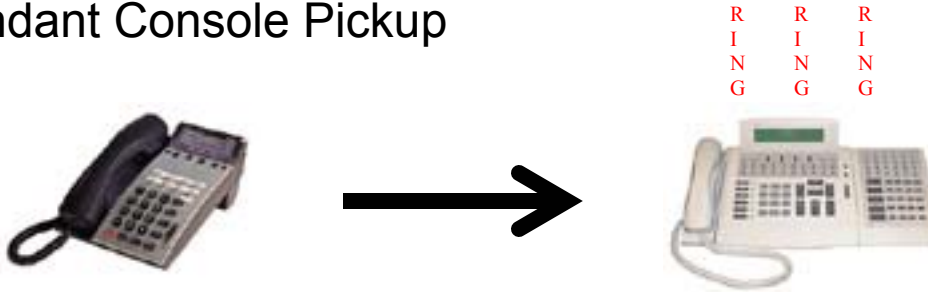

This feature allows trunk calls directed to the Attendant Console to be picked up at will by a Dterm set via an access code or a feature key. Trunk calls only can be accessed and not internal Operator calls.

1. CM 3001>XXX>05 Place the trunks in another tenant. 05 is for example only.
2. For ring down analog trunks...  
CM 3002>XXX>10 Terminate the trunks to Attcon + TAS
3. For DID circuits...  
CM 7600>XXXX>050 Point the received digits to a conversion pattern. Pattern 050 is for example only.
4. CM 7601>050>D10 Assign the conversion pattern to Attcon + TAS.
5. CM 630>0105>0 Allow TAS answer for station to trunk tenant where 01= the answering station tenant and 05 = the trunk tenant. Tenants 01 and 05 for example only.
6. Because station and trunk tenant are different allow this for TAS group A...  
CM 530>7>0
7. For using an access code from the Dterm...  
CM 200>X-XXXX>A047 Where X-XXXX = an available access code in the numbering plan. A047 is for TAS group A.
8. For using a feature key on the Dterm...  
CM 9000>XXXX,Y>F0047  
Or if you want the Dterm key to flash and ring  
CM 9000>XXXX,Y>F4005 Answer key for tenant 05.