## **T1 Assignment**

Below is the basic assignment for a 24 channel T1 B8ZS/ESF with wink signaling. Trunk route and trunk numbers are examples only.

- 1. Take note of, or set the sense wheel on the 24DTA card e.g. 4
- 2 CM 05>04>09
- CM 0701>0400-0423>D100-D123
   Note: All channels must be assigned.
- 4. CM AA00>04>0
- 5. Reset switch.
- 6. CM 3000>100-123>10
- 7. CM 3500>10>04
- 8. CM 3504>10>2
- 9. CM 3509>10>03
- 10. CM 3520>10>00
- 11. CM 3521>10>02
- 12. CM 3524>10>2
- 13. CM 3546>10>1
- 14. Reset the T1 card.

## If receiving DID digits on the T1 the following may also be required.

- 15. CM 3512>10>3 (if receiving 4 digits) or 2 (if receiving 3 digits).
- 16. CM 3517>10>11 if 1 digit deletion is required on the received DID #.
- 17. CM 3518>10>0 (if digit conversion of receiving digits is required).
- 18. CM 200>52>804 where received DID digits are 5200-5299.
  Note: Received digits must = a station number regardless of if they are to be converted to another number or not.
- 18. CM 760>5200>200 where DID 5200 is to terminate to station 200.