


Basic CCIS IVS Example Page 2 of 2.

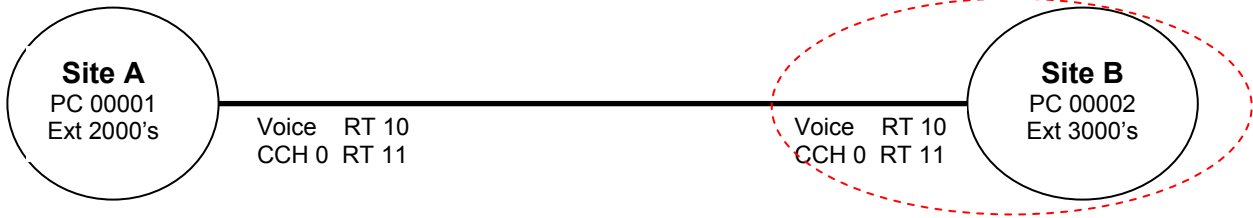

Below is the basic CCIS programming for site B. Sense wheel, T1 trunk #'s and route numbers are example only.

1. Take note of, or set the sense wheel on the SC00 card e.g. 8
See **Note:1**
2. Take note of, or set the sense wheel on the 24DTA card e.g. 9
3. CM 05>08>11
4. CM 05>09>09
5. CM 0607>0>08
6. CM 0701>0900~0923>D100~D123
7. Reset the MP
8. CM 3000>100~122>10
123>11
9. CM 3500>10>04
11>04
10. CM 3504>10>2
11>2
11. CM 3509>10>03
11>03
12. CM 3520>10>00
11>00
13. CM 3590>10>0
11>0
14. CM 3591>10>0
11>0
15. CM 3035>100-122>001-023
16. CM AA00>09>0
17. CM A700>0>123
18. CM A701>0>00002
19. CM A702>0>00001
20. CM A8>00001>0
21. CM A726>0>0 (Name Display)
22. CM A728>0>0 (CID over CCIS)
23. CM 08>379>0
24. CM 09>53>0
25. Reset the MP
26. CM 200>2>A129
27. CM 8AA000>2>4007
28. CM 8A4007>2>0020
29. CM 8A0020>1>02010
30. CM 857>2>04
31. CM 08>028>0
32. CM 360>1010>0

Note:1 Confirm chip revision on the SC00 card. For CCIS with name display chip must be CB0.1 or higher with 1500 series software.

For Caller ID (inbound only) over CCIS chip must be CD0.01 or higher with 1800 series software. Chip revision A1 is for IVS2/IPS and will not work on IVS.